

Soprano

convectair.com



Photo / page 15

INSTALLATION AND CONNECTION

Installation height 6 ft (1.8 m).

Clearances


■ **Front:** 20 in (50 cm) ► **Sides:** 4 in (10 cm) ▲ **Above:** 12 in (30 cm) ▼ **Under:** 72 in (180 cm)

Installation Quick-mounted surface installation with easy snap-on bracket.

Connection 240-V unit: Flexible cord connection, including junction box cover. Installation requires 2 in X 3 in wall box (not included) and a timer (not included) that is suited to the voltage chosen.


120-V unit: Armoured cable connection, including junction box cover. Installation requires a wall box (not included) and a timer (not included) that is suited to the voltage chosen.

Note Wattage can be selected at time of installation: 750 or 1500 W.

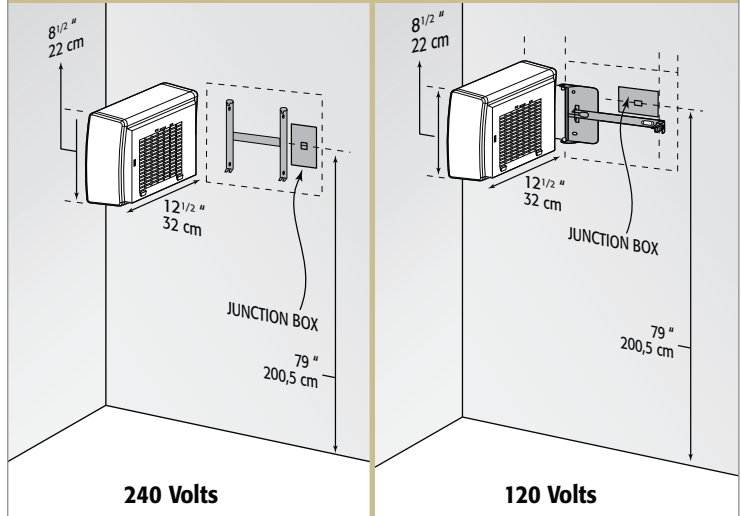


HEATING ELEMENT

Total capacity 750 (120V) or 1 500 W (240V)

 **Fan-forced heat** Low-thermal-mass heating element combined with low-pressure tangential blower.

Thermal protection Resettable overheat protection. Reset by turning heater off.

TEMPERATURE CONTROL

 **Not included.** Convectair recommends the installation of a 30- or 60-minute timer that is compatible with the selected power and voltage.

CABINET

 **Steel** construction with polyester/epoxy anti-rust powder coating.

Cabinet Splash-proof construction with rounded edges. 120-V unit: Bracket provides access to the back without dismantling the unit, for easy maintenance.

Louvers Bottom grille directs the hot air downwards, towards the centre of the room to ensure even temperature.

Color BB = White

MODEL	Catalog No.	Color	Power		Height		Width		Thickness		Weight	
			240-V	208-V	cm	in	cm	in	cm	in	kg	lb
SOPRANO ③	7808-C15	BB	750 - 1 500 W		22	8 1/2	32	12 1/2	14	5 1/2	3,7	8,1

120 VOLTS

SOPRANO ④	7808-B15	BB	750 - 1 500 W		22	8 1/2	32	12 1/2	14	5 1/2	3,7	8,1
-----------	----------	----	---------------	--	----	-------	----	--------	----	-------	-----	-----

③ Not compatible with the Programmer system.

④ Not compatible with the Programmer system. For use with 120 V outlets.

For guaranteed, dependable operation, we recommend that all units be installed by a licensed electrical contractor. Consult **convectair.com** to find the most recent installation instructions for our heaters.

