

INSTRUCTIONS FOR INSTALLATION AND USE OF MODEL 7821 FAN HEATER

THE CONVECTAIR SHOULD BE INSTALLED BY A QUALIFIED ELECTRICIAN, IN ACCORDANCE WITH THE NATIONAL AND LOCAL CODES. HEATER SHOULD BE INSTALLED AT 10 INCHES FROM THE FLOOR AND AWAY FROM DRAPES AND FURNITURE.

FEATURES :

THERMOSTAT OPERATES THE 1 KW HEATING ELEMENT
TIMER OPERATES THE 2 KW ELEMENT.

MOUNTING :

DRILL THREE HOLES IN THE WALL USING THE TEMPLATE PRINTED ON THE BOX AND SCREW THE UNIT TO THE WALL.

WIRING :

THE CONNECTION SHOULD BE MADE BY USING THE KNOCK OUT.
TO REMOVE THE CASING, PULL OUT THE TWO CONTROL KNOBS AND REMOVE THE TWO SCREWS AT THE BOTTOM.

CONNECT THE GROUND WIRE TO THE GREEN SCREW AND THE CABLES TO THE TERMINALS.

OPERATING INSTRUCTIONS :

BASIC HEATING THE THERMOSTAT WILL ENSURES AND MAINTAINS THE ROOM AT THE DESIRED TEMPERATURE.

TIMER : THE TIMER (LEFT KNOB) WILL TURN THE FULL POWER OF THE UNIT (2 KW) TO BOOST THE TEMPERATURE FOR A SHORT PERIOD AS DESIRED.

CLEANING : DO NOT USE ABRASIVE DETERGENTS TO CLEAN JUST WIPE CLEAN WITH A SOFT CLOTHE.

